

INSTALLATION INSTRUCTIONS

AIR INFLATING STATION ALTAO® PUMP



PRECAUTIONS

To fix ALTAO® Pump in the floor, we supply 3 long screws Ø M8 with flat washers and plastic rawplugs.

Caution : This way of fixing is convenient only for floors like asphalt or concrete.
If the floor is different, use fixing elements adapted.



To use it easily, we suggest you to install the station spaced from a wall or any other obstacle:

- On the fixed side: mini 50cm
- On the removable side: 1m if you chose the station without lateral slot; 2.5m if you chose this option (to put your bike).
- Back of the station: mini 18cm

MATERIALNEEDED

- 1 hole puncher
- 1 drill-bit Ø 12
- 1 socket wrench n°13
- 1 measuring tape
- 1 felt-tip marker

INSTALLATION

1. Place the station ALTAO® Pump where you want to install it.
2. Mark the position of the 3 holes Ø15 mm drilled on the station base.
3. Remove ALTAO® Pump station and drill the floor on the 3 marks thanks to a hole puncher and a drill-bit Ø12mm. Holes depth must reach 80mm minimum.
4. Install inside these holes plastic rawplugs.
5. Put back the station and screw long screws and washers with socket wrench n°13.

Your inflating station ALTAO® Pump is now installed. You can make it available to bikers !