

MONTE RINGS ANVI SNING








Monteringsanvisning

Soffa/Bord/Bänk Stjerneborg

8042441, 8042462, 8042466



proffs på
utemiljö

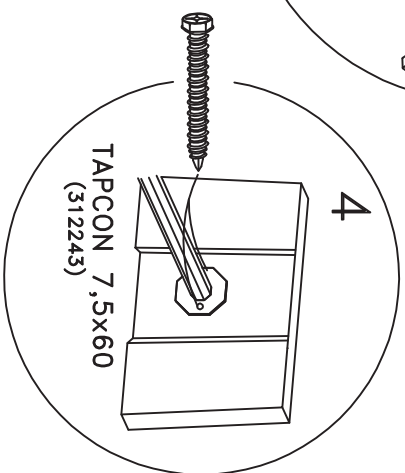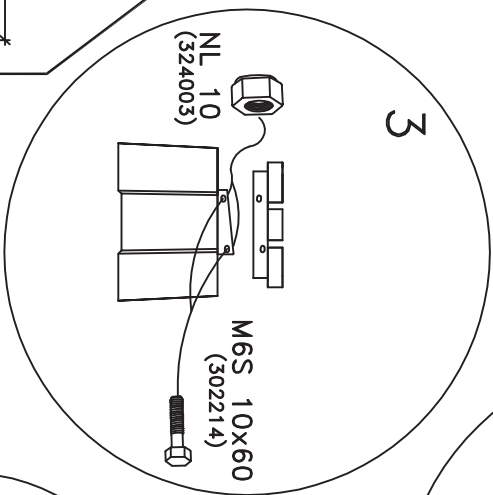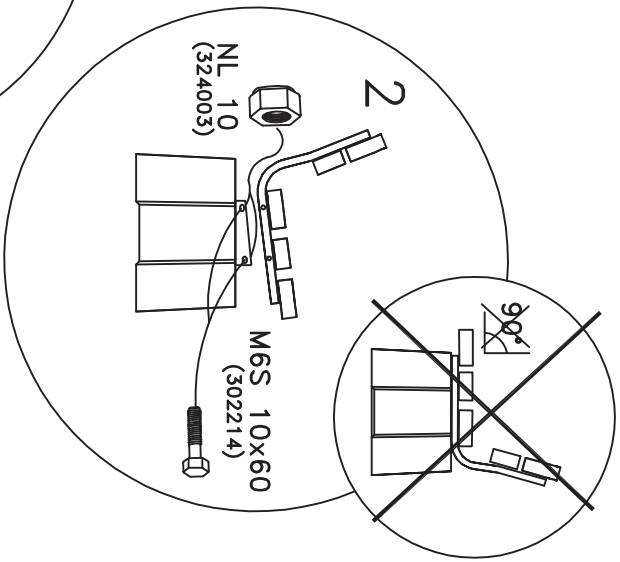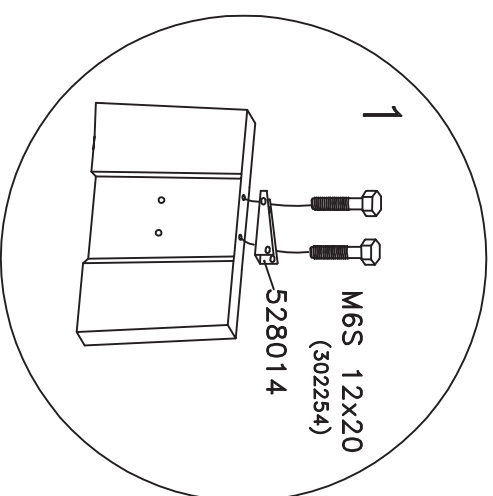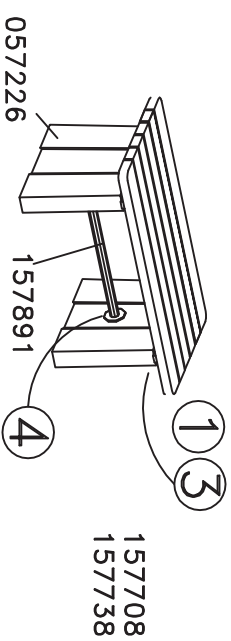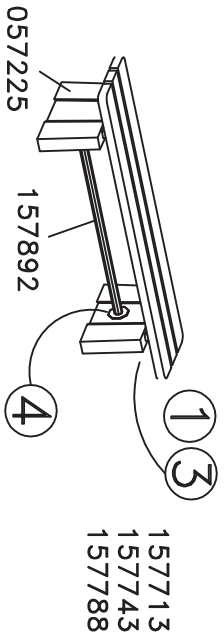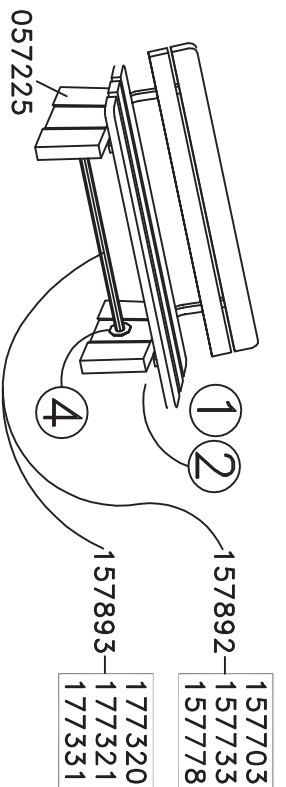

A=0,18-0,20m
 B≈0,45m
 C≈0,60m

